



Pins PL5
 Pin Number: Function (active low)
 nc: Vib1 (no connection)
 1: Cho1
 2: Vib2
 3: Cho2
 4: Vib3
 5: Cho3
 6: nc
 7: CTRL_0 (Leslie Slow)
 8: CTRL_1 (Leslie Fast)
 9: Vcc
 10: Common GND switch center

Pins PL7 LED Button I/O
 Pin Number - Function (active low)
 1: Perc ON, like B3
 2: Perc SOFT (NORMAL)
 3: Perc FAST (SLOW)
 4: Perc THIRD (SECOND)
 5: Vib ON upper
 6: Vib ON lower
 7: Leslie ON
 8: Leslie FAST
 9: (Vcc)
 10: Common Gnd

Pins PL11 LED Button I/O
 Pin Number - Function (active low)
 1: Common Preset 1
 2: Common Preset 2
 3: Common Preset 3
 4: Common Preset 4
 5: EFX1 (Reverb 1)
 6: EFX2 (Reverb 2)
 7: Bass on Leslie
 8: Split Lower
 9: (Vcc)
 10: Common Gnd

PL24
 KlinkeStereo
 Foot Switch