


U1, PL3 and PL4 only needed if board used as Preset Buttons!

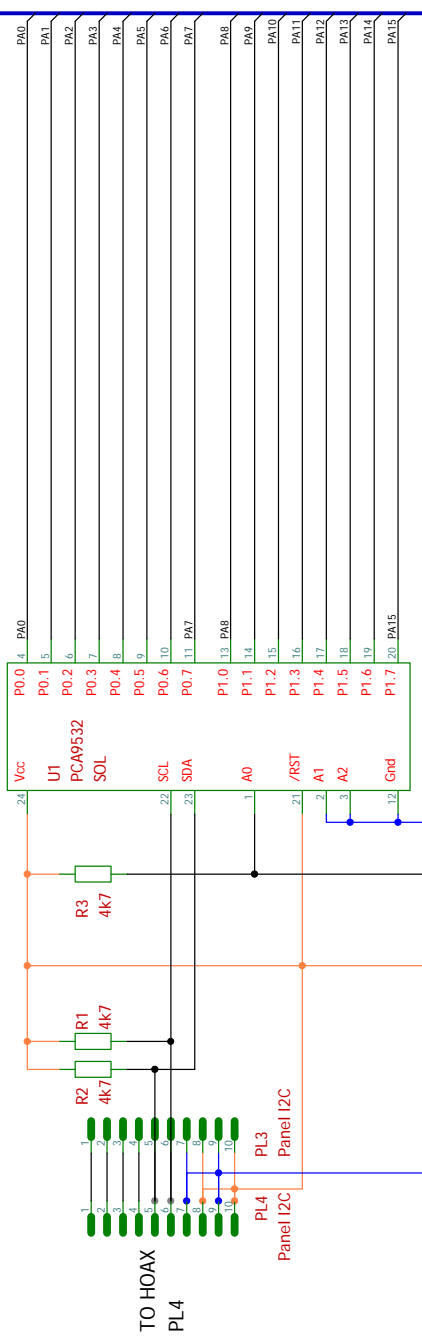


HOAX Panel 1.31

by C. Meyer 11/2010, 06/2012

I2C I/F ADDR PCA9532D
 JP1 \$60 (upper presets)
 no JP1 \$61 (lower presets)

Board may either be connected as Preset Button Assembly to HOAX PL4
 or used as Tab Switch Assembly (U1, PL3, PL4 omitted)

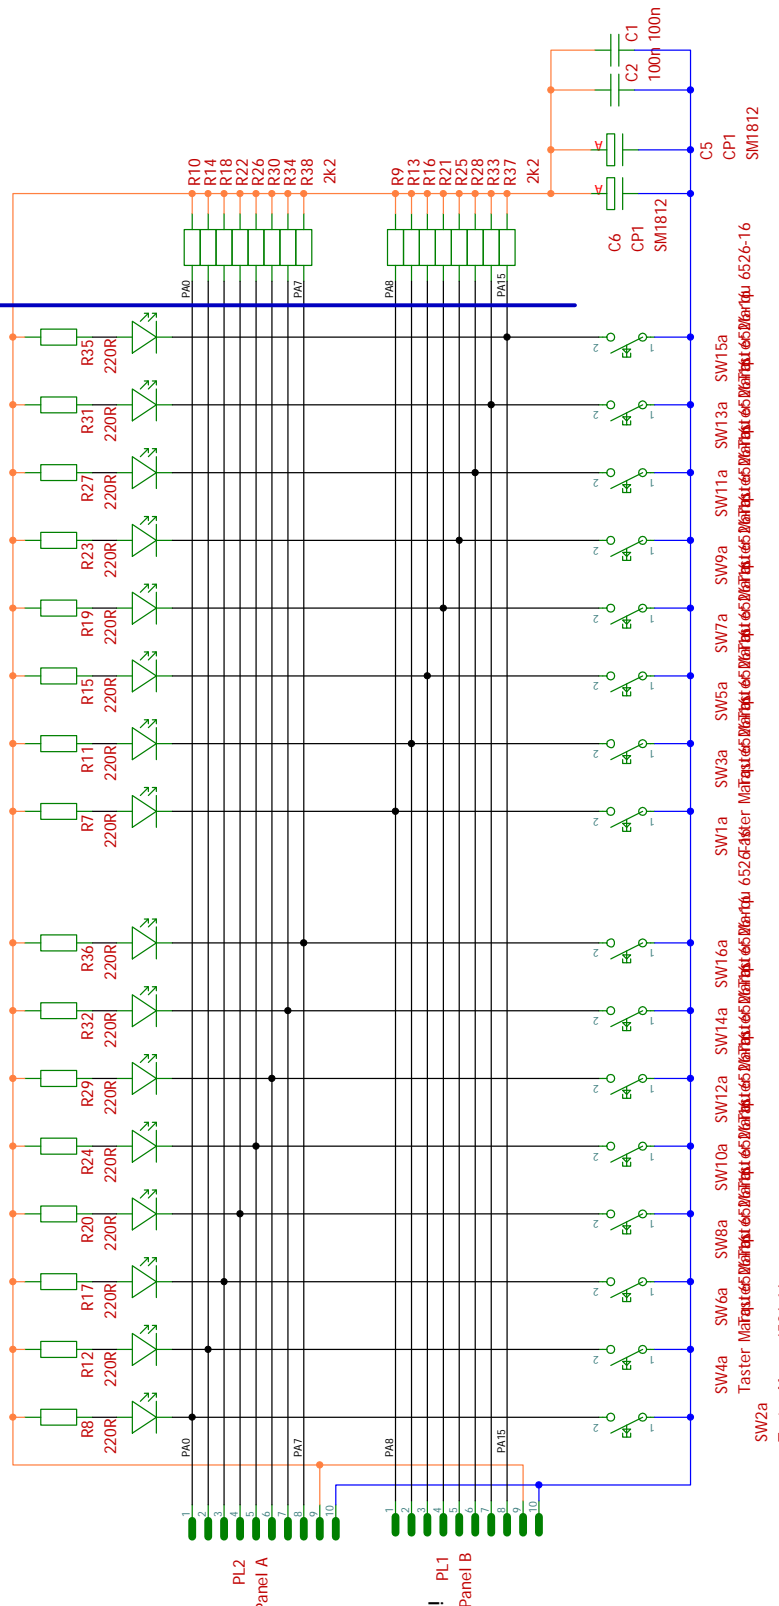

Use as Tab Buttons
 Assembly only:
 TO HOAX
 PL7/PL11
 I2C circuit U1
 removed/left blank!

- SW2a Taster Marqu 6526-16
- SW4a SW4a
- SW6a SW6a
- SW8a SW8a
- SW10a SW10a
- SW12a SW12a
- SW14a SW14a
- SW16a SW16a
- SW1a SW1a
- SW3a SW3a
- SW5a SW5a
- SW7a SW7a
- SW9a SW9a
- SW11a SW11a
- SW13a SW13a
- SW15a SW15a
- C5 100nF
- C6 100nF
- CP1 SMT1812