


HX 3.7 Legacy Board


- Pins PL29**
- 1: PREAMP_DBSELECT_UPPER
 - 2: PREAMP_DBSELECT_LOWER
 - 3: PREAMP_LESLIE_RUN
 - 4: PREAMP_LESLIE_FAST
 - 5: PREAMP_REV1
 - 6: PREAMP_REV2
 - 7: PREAMP_OD1
 - 8: PREAMP_OD2
 - 9: DVcc
 - 10: GND

PL29 PREAMP CTRL

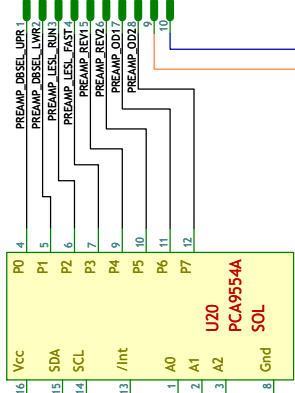

- Pins PL26 LED Button I/O**
- Pin Number - Function (active low)
- 1: Perc ON, like B3
 - 2: Perc SOFT (NORMAL)
 - 3: Perc FAST (SLOW)
 - 4: Perc THIRD (SECOND)
 - 5: Vib ON upper
 - 6: Vib ON lower
 - 7: Leslie ON
 - 8: Leslie FAST
 - 9: (Vcc)
 - 10: Common Gnd


- Pins PL25 LED Button I/O**
- Pin Number - Function (active low)
- 1: Common Preset 1
 - 2: Common Preset 2
 - 3: Common Preset 3
 - 4: Common Preset 4
 - 5: EFX1 (Reverb 1)
 - 6: EFX2 (Reverb 2)
 - 7: Bass on Leslie
 - 8: Split Lower
 - 9: (Vcc)
 - 10: Common Gnd

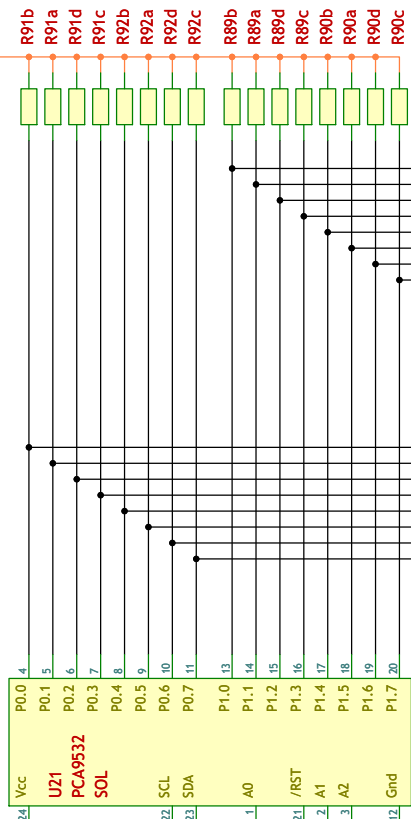

- Pins PL24**
- Pin Number: Function (active low)
- nc: Vib1 (no connection)
 - 1: Cho1
 - 3: Cho2
 - 4: Vib3
 - 5: Cho3
 - 6: nc
 - 7: CTRL_0 (Leslie Slow)
 - 8: CTRL_1 (Leslie Fast)
 - 9: Vcc
 - 10: Common GND switch center

PL24 PERC/VIBON/LESL

PL25 PRESET/EFX/SPLIT

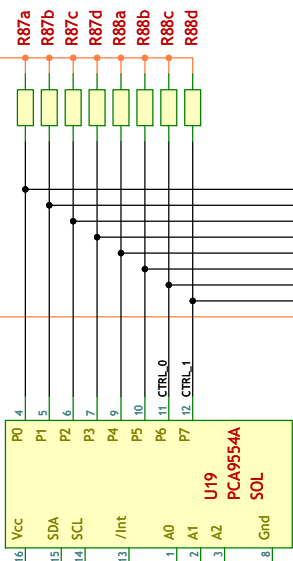

PL24 VIBSW V1-C3

